

ALTITUDE

Air has lower density and less oxygen at high altitude. At high altitude, reduce the butane flow rate by rotating the flame adjustment in the clockwise (-) direction.

TEMPERATURE

Butane ignites poorly in cold conditions (e.g. below 55°F). So if your lighter is cold, warm it up in your hand or pocket for a few minutes.

WARRANTY

VaporGenie lighters carry a 2-year no-hassle repair service warranty from date of purchase. This warranty does not cover scratches, normal wear, or clogging from using bad fuel. It covers butane leaks, igniter malfunction and stuff like that. Make sure you don't use cheap fuel!

For warranty service on your VaporGenie lighter, just fill out the warranty request form on our website: www.VaporGenie.com/warranty

www.VaporGenie.com

TROUBLESHOOTING

SYMPTOM	CAUSE	SOLUTION
Lighter will spark but not ignite	Air lock Dirty burner Flame adjustment	Bleed tank, refill Clean with air blast Adjust
Lighter will not spark	Ignition system malfunction Dirty burner	Warranty Clean with air blast
Hissing Sound	Flame adjustment too high Butane leak	Lower flame adjustment Warranty
No Sound	Flame adjustment too low Valve clogged due to bad fuel	Raise flame adjustment Service for fee

VaporGenie® Lighter


Instructions & User's Guide

OPERATING INSTRUCTIONS

- 1) Operate the push-down ignition switch slowly and gently.
- 2) The lighter ignition system has a split-second delayed reaction time.
- 3) Fast ignition usually results in misfiring, whereas slow and gentle ignition method ensures perfect ignition every time.

FLAME HEIGHT ADJUSTMENT

To adjust flame height, rotate dial on bottom of lighter. Be sure not to adjust too high as this will cause inconsistent ignition.

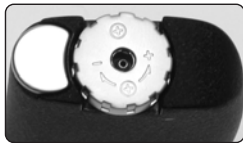

WARNING!

KEEP AWAY FROM CHILDREN

- Exercise care in use. Ignite lighter away from face and clothing.
- Be sure the flame is out after use.
- May contain flammable gas under pressure.
- Never expose to heat above 120°F (49°C) or to prolonged sunlight.
- Never leave a lighter on the dashboard, or near rear window shelf of any vehicle.
- Never puncture or put in fire.
- Under no circumstances should the user tamper with the lighter or attempt to adjust, other than by using the controls provided.
- Failure to follow instructions can result in serious personal injury.

Use only high quality butane fuel in your VaporGenie™ lighter.

Make sure it says "filtered" or "refined" somewhere on the bottle. Smoke shops almost always have high quality butane available. Some good brands are Lotus, Colibri, King and Xikar. DO NOT USE Ronson, Sun, Clipper or Neon Brands butane fuel, THAT STUFF IS CRAP AND WILL CLOG YOUR LIGHTER, CAUSING INCONSISTENT IGNITION AND DECREASED PERFORMANCE.

REFILLING LIGHTER

Fuel tank must be completely empty in order to refill. If the fuel tank is not completely empty, new butane will not be able to enter the fuel tank.

1) To empty/bleed the fuel tank, depress the fill valve stem at the center of the adjustment dial. Use the poker pin that comes with the lighter to do this. Do this a couple times to make sure all the butane is exhausted.



2) To refill fuel tank, hold the lighter in a upside down position. Place plastic nozzle/tube of the butane can on the fill valve stem, and press for about 4 or 5 seconds. Butane can must be inverted so that liquid butane enters the lighter. **Caution, Fire Hazard:** butane may leak during refilling.

After filling the tank, its best to wait a couple minutes before using.

